

BC945 Dolphin Stainless Steel Double Mini Jumbo Dispenser

Installation instructions

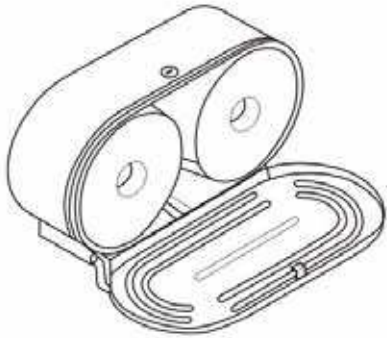


Fig.1

Installing New Tissue Rolls

Unlock and open the cover to the dispenser as shown in Figure 1. Insert one 3" core tissue roll onto each spindle. Remove the core adapters to fit 2-1/4" diameter core rolls onto the spindles.

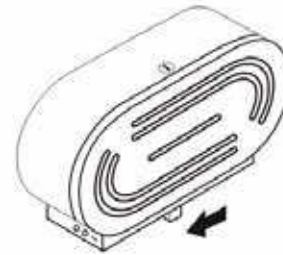


Fig.2

Accessing Reserve Roll

When the first roll becomes empty, the second (reserve) roll may be accessed. Move the access panel lever as shown in Figure 2 until the panel locks in position. This will allow for access to the reserve roll.

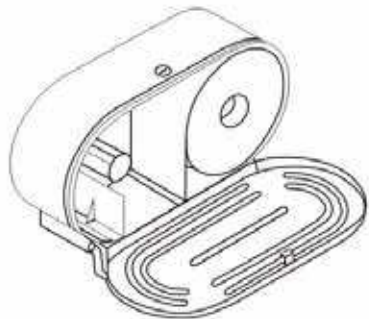


Fig.3

Reserve Roll (cont'd)

Figure 3 shows the reserve roll in the 'access' position (the cover is shown open for clarity). The access panel automatically returns to its original position each time the dispenser cover is opened.

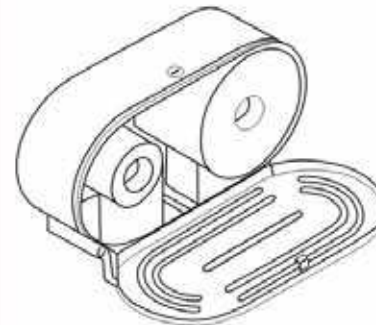


Fig.4

Installing Replacement Rolls

Unlock and open the cover to the dispenser as shown in Figure 4. Move the remaining roll to the left spindle and install a new roll on the right spindle.

