
Sealant B[™]

Emulsion polish primer

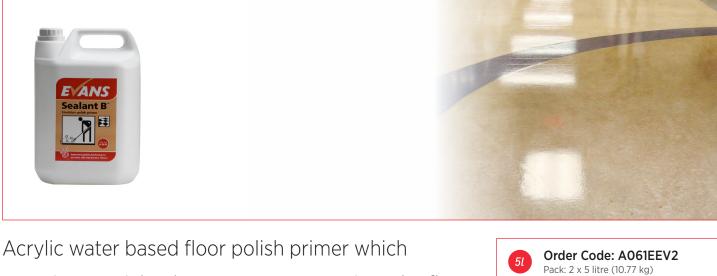

contains special polymers to penetrate into the floor

surface.

Acts as an undercoat for the optimum polish performance.



Especially effective on old, worn & porous floors prior to polishing the floor.

- Provides a solid foundation on old & worn floors. .
- Improves the durability of the floor polish. •
- Also suitable for use on new floors.
- For use on vinyl, rubber, linoleum, terrazzo & marble.
- Coverage per 5 litre 400/500 sq. metres for 1 coat.

APPLICATION:

Ensure floor is dry, clean & neutral.

Use undiluted.

Pour SEALANT B[™] into a clean bucket or tray, alternatively pour directly onto the floor in a thin line.

Place mop or applicator into primer, & spread thinly & evenly over the floor. Leave to dry for approximately 30 minutes.

If the floor is very old or porous, a second coat maybe required.

When the floor is completely dry, apply an emulsion floor polish.

RELATED ITEMS:

- Mexapol[®] High solids floor polish.
- Enhance[™] Ultra high solids floor polish.
- Floor & Carpet Care Guide.



Pallet: 60 Packs

PRODUCT INFORMATION:

Appearance: Odour: pH - undiluted: Shelf life

Opaque white liquid Characteristic 7.6 3 years

COMPOSITION:

Contains an aqueous dispersion of acrylic co-polymers, plasticisers, coalescent, nonionic surfactant, defoamer, levelling agent & preservative.

BIODEGRADABILITY:

All surfactants used in Evans Vanodine products comply with the current European Regulations concerning biodegradability & protection of the environment.

QUALITY ASSURANCE:

This product is manufactured in the U.K. by EVANS VANODINE INTERNATIONAL PLC under an ISO 9001 Quality Management System Cert. No. FM 09535 and an ISO 14001 Environmental Management System Cert. No. EMS 506072 registered by the British Standards Institution.

REVISION DATE: 01/06/16





Evans Vanodine International plc

Brierley Road, Walton Summit, Preston, PR5 8AH, UK www.evansvanodine.co.uk | Tel: +44 (0)1772 322200 | Fax: +44 (0)1772 626000